



Canon EOS 30 Lens Mount Rings

How to remove the lens mount rings.

Written By: Antonia



INTRODUCTION

The three stacked rings in the lens mount ring can be safely and easily removed.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Front Panel



- Remove two 4.8 mm black screws on the front of the camera.

Step 2



- Remove one 4.3 mm black screw under the lens ring and one 4.8 mm black screw on the bottom of the camera.

Step 3




- Remove one 4.8 mm black screw on the left side.

Step 4




- Remove the front panel by lifting out the side opposite the grip.

Step 5 — Lens Mount Rings

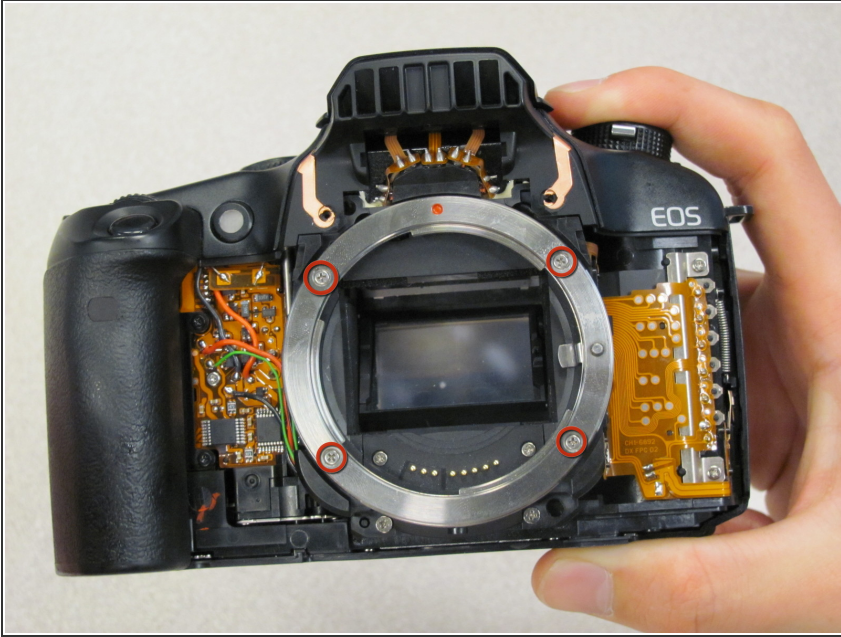

- Remove four 7.1 mm silver screws from lens mount ring.

Step 6

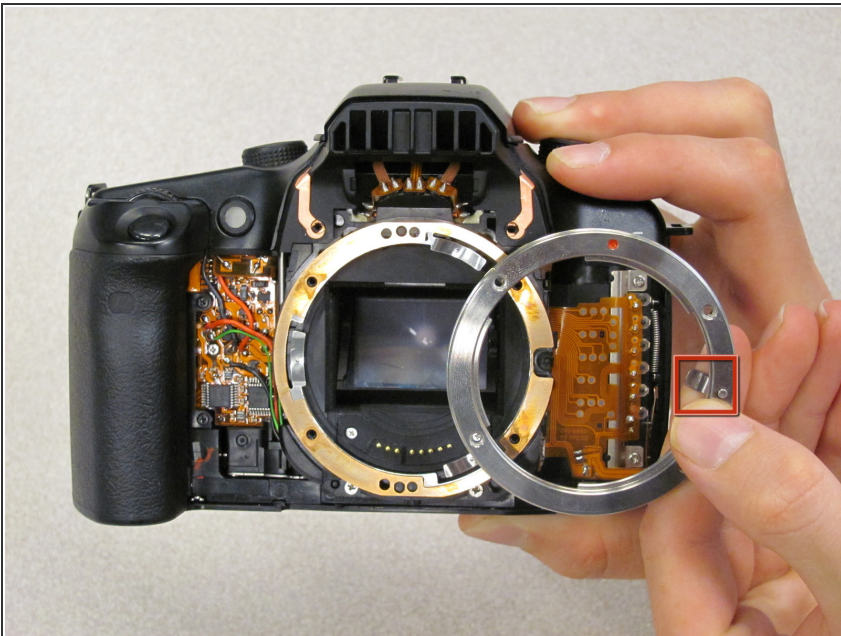

- Remove outer mount ring.
- The silver button may detach.

Step 7



- Remove thin gold ring.
- Correct orientation is pictured.

Step 8



- Remove thin silver ring.
- Correct orientation is pictured.

Step 9



- All rings are removed.
- Follow pictures in reverse order to replace rings.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 09:15:19 PM.